


# Porta Potti 145/165

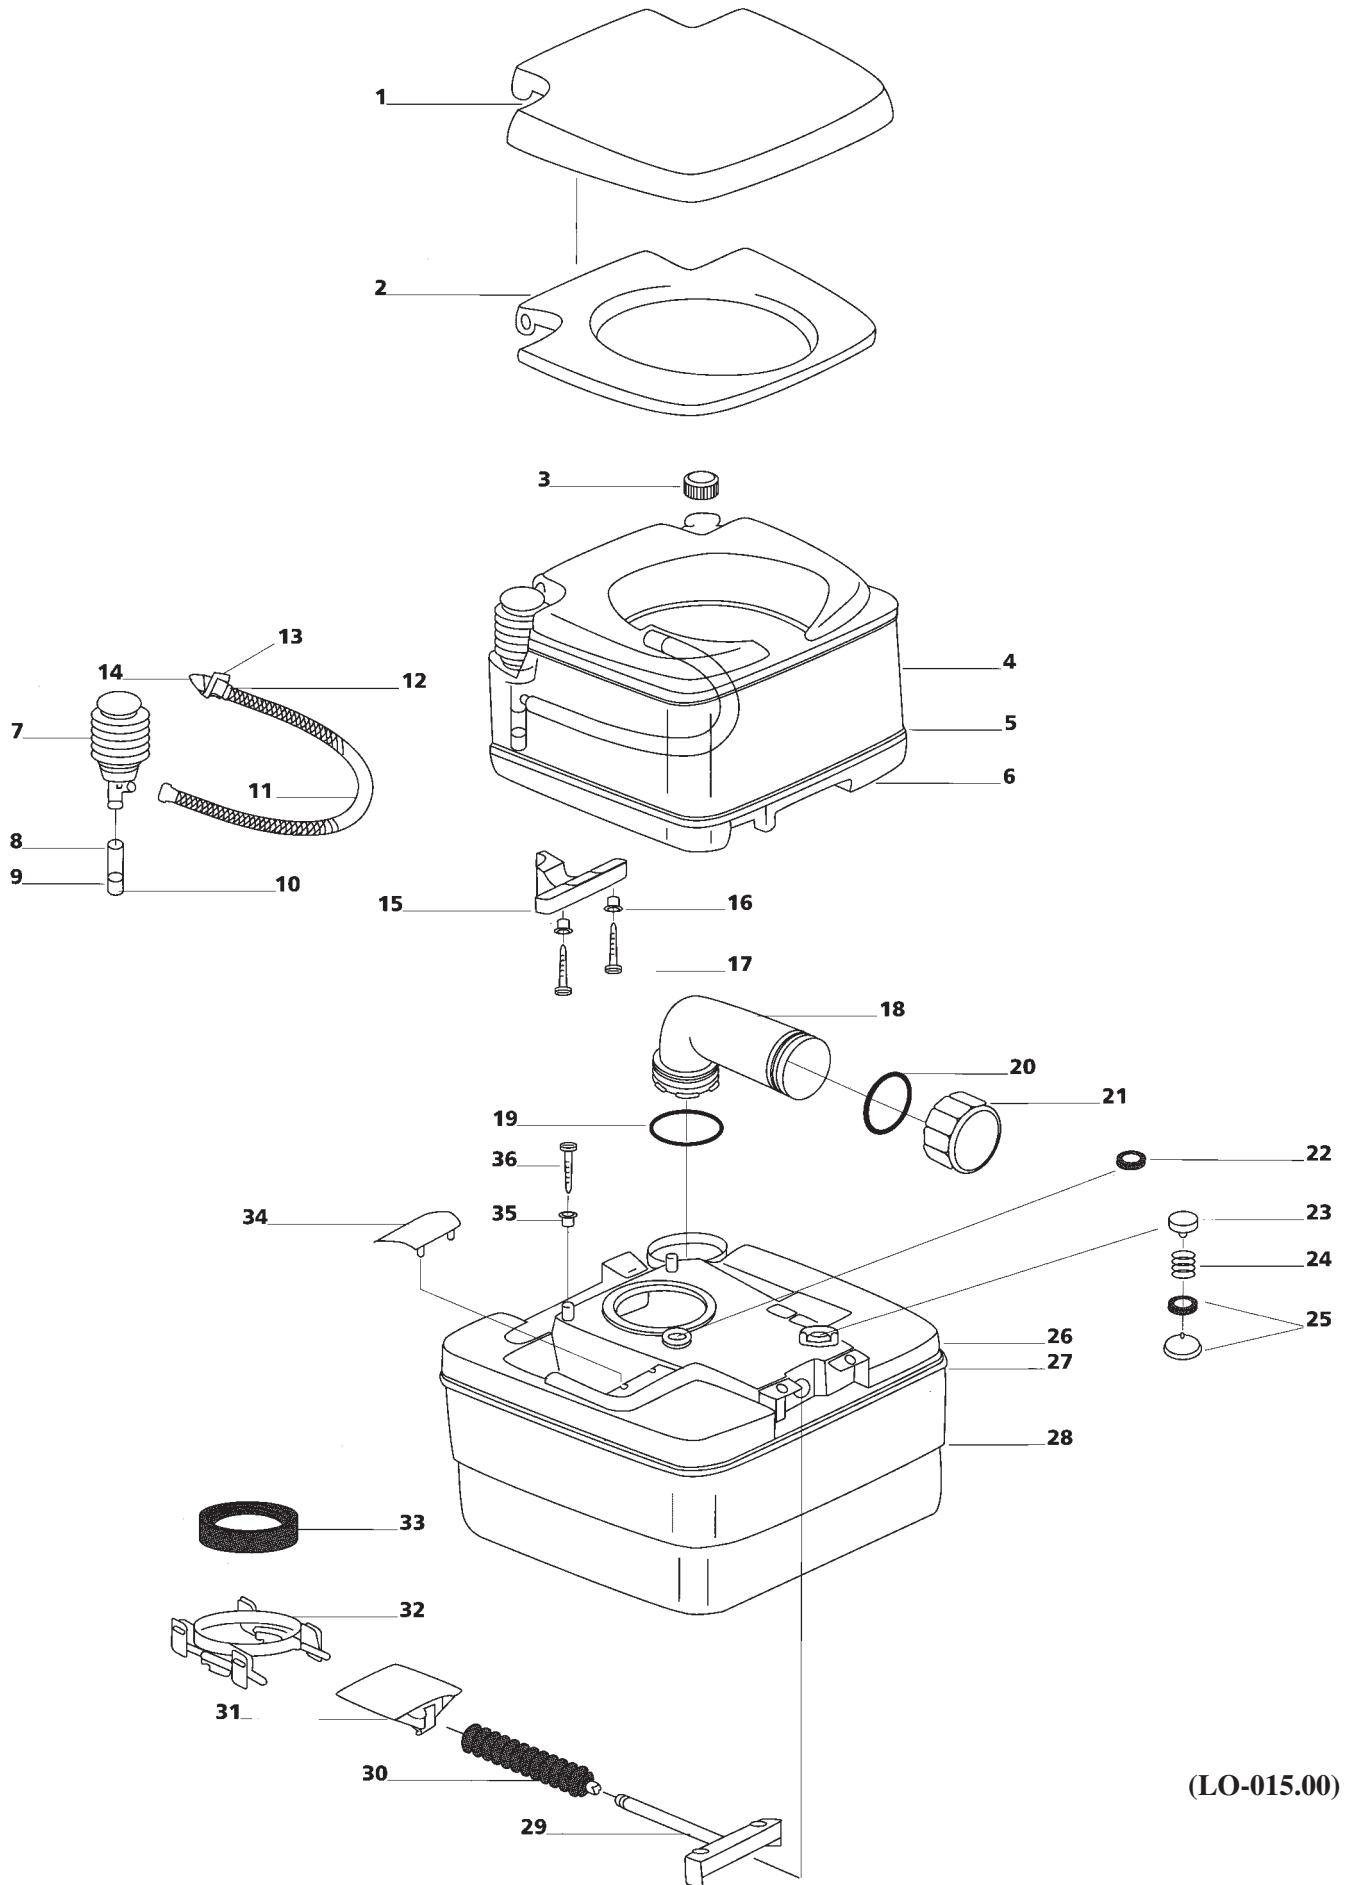


(LO-015.00)

**Porta Potti 145/165 (LO-045.00)**

Spare part	Single spare part number	Assembly spare part number	Available in colour number
1. Cover		07331	44/68 (Elegance)
2. Seat			
3. Waterfill cap	12901		79
4. Watertank upper			
5. Weld watertank			
6. Watertank lower			
7. Bellow	07862		62/79
8. Inlet tube			
9. Check valve body		07024	
10. Check valve flapper			
11. Flush tube			
12. Spring-seal-plunger		07031	62/79
13. O-ring			
14. Nozzle			
15. Clasp handle			
16. Clasp spacer			
17. Screw			
18. Pour out Spout		07492	62
19. O-ring (+20.)	16195		
20. Capseal			
21. Dump cap (+20.)	07493		62
22. Ventseal	07102		
23. Vent button			
24. Spring		07524	62/79
25. Seal retainer			
26. Holdingtank upper			
27. Weld holdingtank			
28. Holdingtank lower			
29. Valve handle			
30. Boot seal			
31. Blade			
32. Retainer			
33. Lipseal	07101		
34. Clip retainer			
35. Clasp spacer			
36. Screw			
Porta Potti 145	Watertank complete	07471 (excl. Seat and Cover)	44
	Holdingtank complete	07475	44
Porta Potti 165	Watertank complete	07471 (excl. Seat and Cover)	44
	Holdingtank complete	07476	44
<b>Attention:</b> For colour Elegance (grey)		Before august 1994	After august 1994
Porta Potti 145	Watertank complete	07471	07471 68
	Holdingtank complete	25813	16791
Porta Potti 165	Watertank complete	07471	07471 68
	Holdingtank complete	25814	07476 68

# Porta Potti 235/245/265

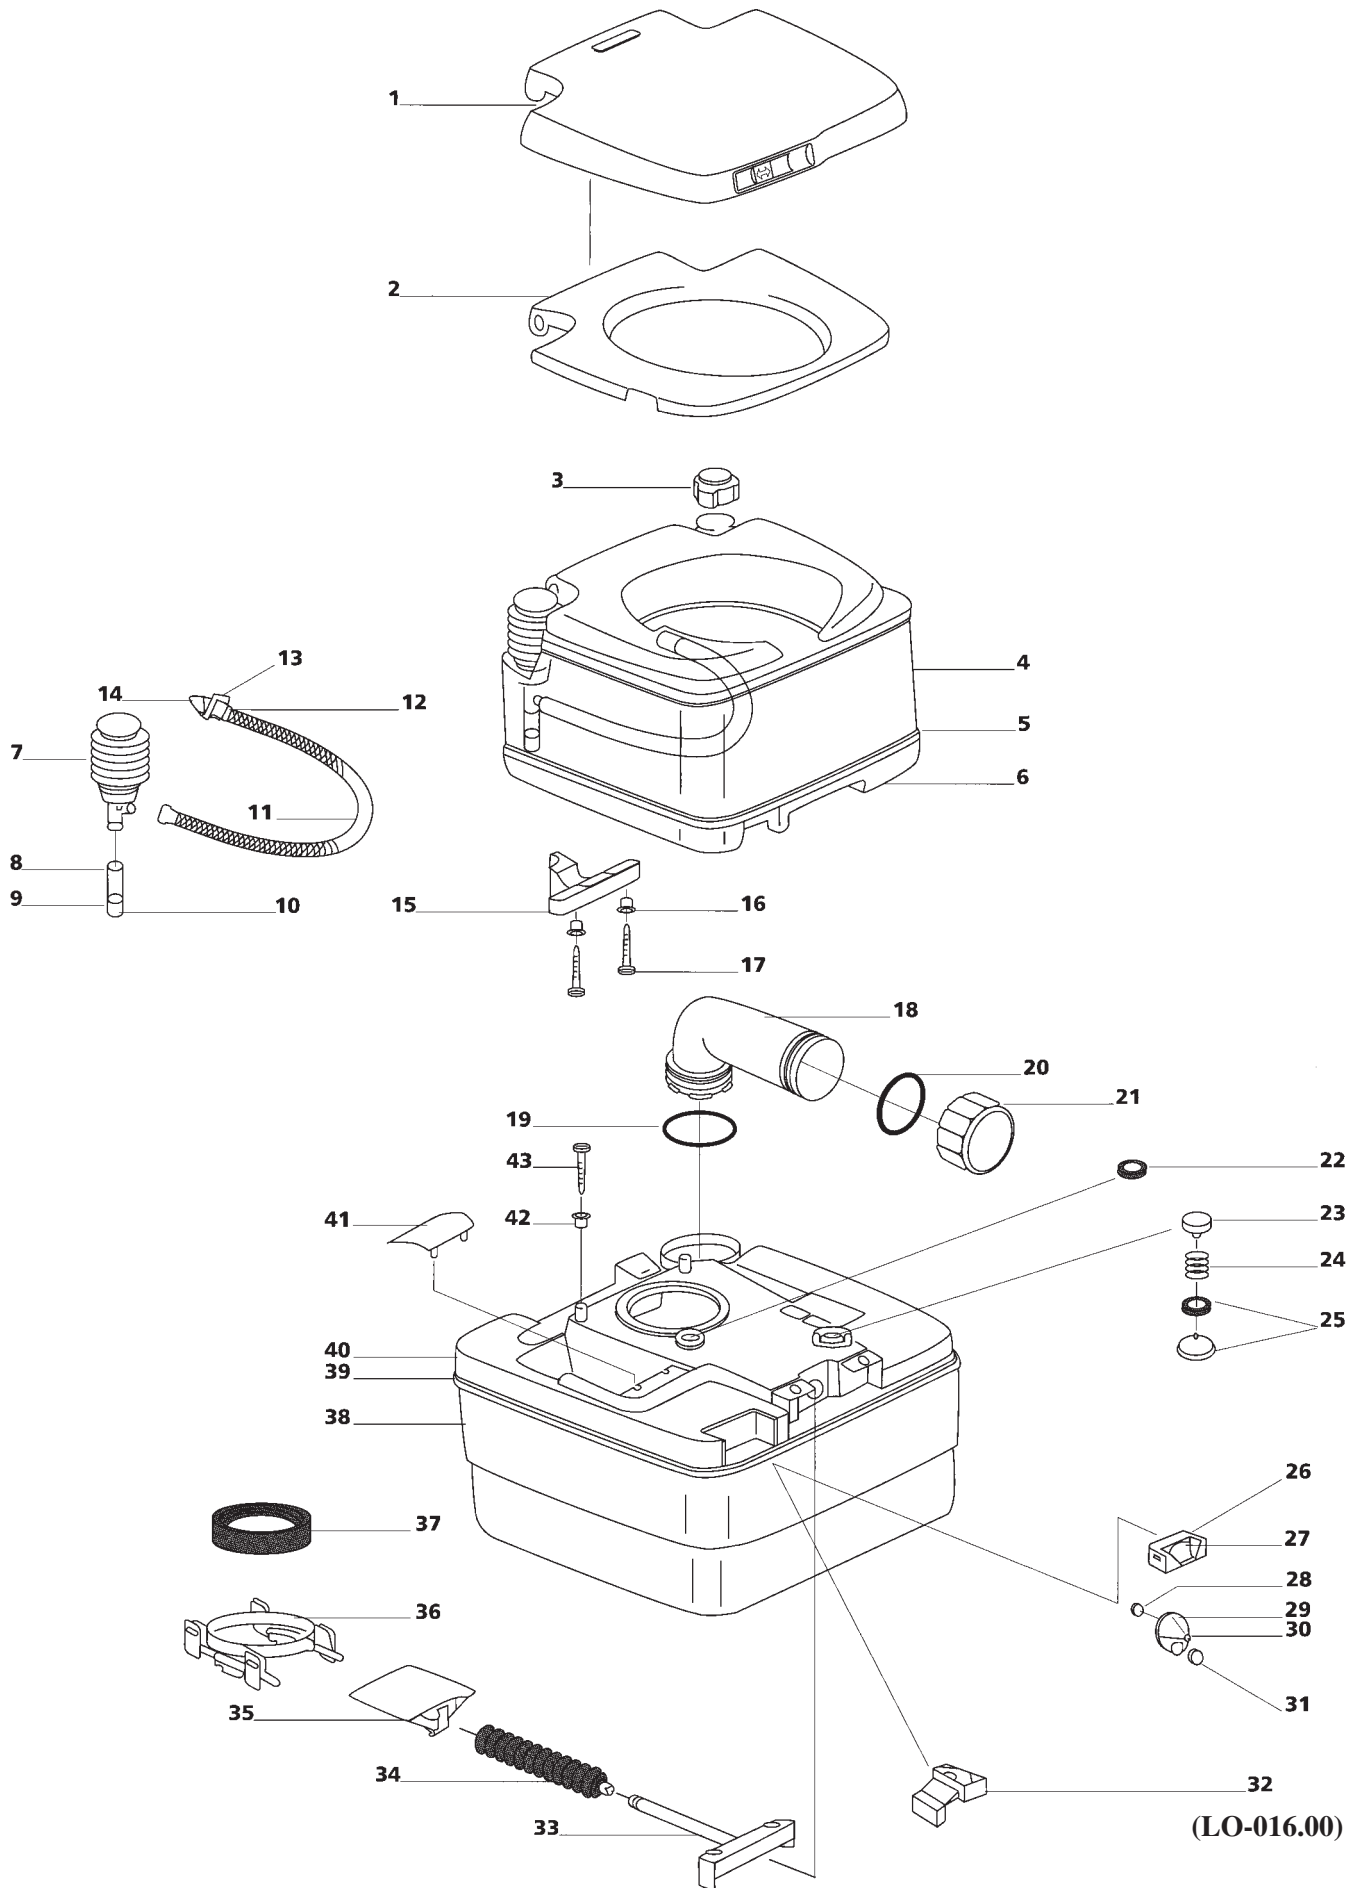


**Porta Potti 235/245/265 (LO-046.00)**

Spare part	Single spare part number	Assembly spare part number	Available in colour number
<b>1.</b> Cover		07317	44/70
<b>2.</b> Seat		(PP 235) 07220	44/70
<b>3.</b> Waterfill cap	25804		70
<b>4.</b> Watertank upper			
<b>5.</b> Weld watertank			
<b>6.</b> Watertank lower			
<b>7.</b> Bellow	07862		62/70
<b>8.</b> Inlet tube		07024	
<b>9.</b> Check valve body		(PP 235) 07016	
<b>10.</b> Check valve flapper			
<b>11.</b> Flush tube			
<b>12.</b> Spring-seal-plunger		07031	62/79
<b>13.</b> O-ring			
<b>14.</b> Nozzle			
<b>15.</b> Clasp handle			
<b>16.</b> Clasp spacer			
<b>17.</b> Screw			
<b>18.</b> Pour out Spout		07492	45/70
<b>19.</b> O-ring (+ <b>20.</b> )	16195		
<b>20.</b> Capseal			
<b>21.</b> Dump cap (+ <b>20.</b> )	07493		70
<b>22.</b> Ventseal	07102		
<b>23.</b> Vent button			
<b>24.</b> Spring		07524	62/79
<b>25.</b> Seal retainer			
<b>26.</b> Bezel			
<b>27.</b> Lens			
<b>28.</b> Weight			
<b>29.</b> Decal level indicator			
<b>30.</b> Dial			
<b>31.</b> Magnet			
<b>32.</b> Float arm	21322		
<b>33.</b> Valve handle			
<b>34.</b> Boot seal			
<b>35.</b> Blade			
<b>36.</b> Retainer			
<b>37.</b> Lipseal	07101		
<b>38.</b> Holdingtank lower			
<b>39.</b> Weld holdingtank			
<b>40.</b> Holdingtank upper			
<b>41.</b> Clip retainer			
<b>42.</b> Clasp spacer			
<b>43.</b> Screw			
Porta Potti 235	Watertank complete	07212 (excl. Seat and Cover)	45/70
	Holdingtank complete	07213	45/70
Porta Potti 245	Watertank complete	07397 (excl. Seat and Cover)	45/70
	Holdingtank complete	07473	45/70
Porta Potti 265	Watertank complete	07397 (excl. Seat and Cover)	45/70
	Holdingtank complete	07474	45/70

For colournumber see page 68

# Porta Potti 335/345/365

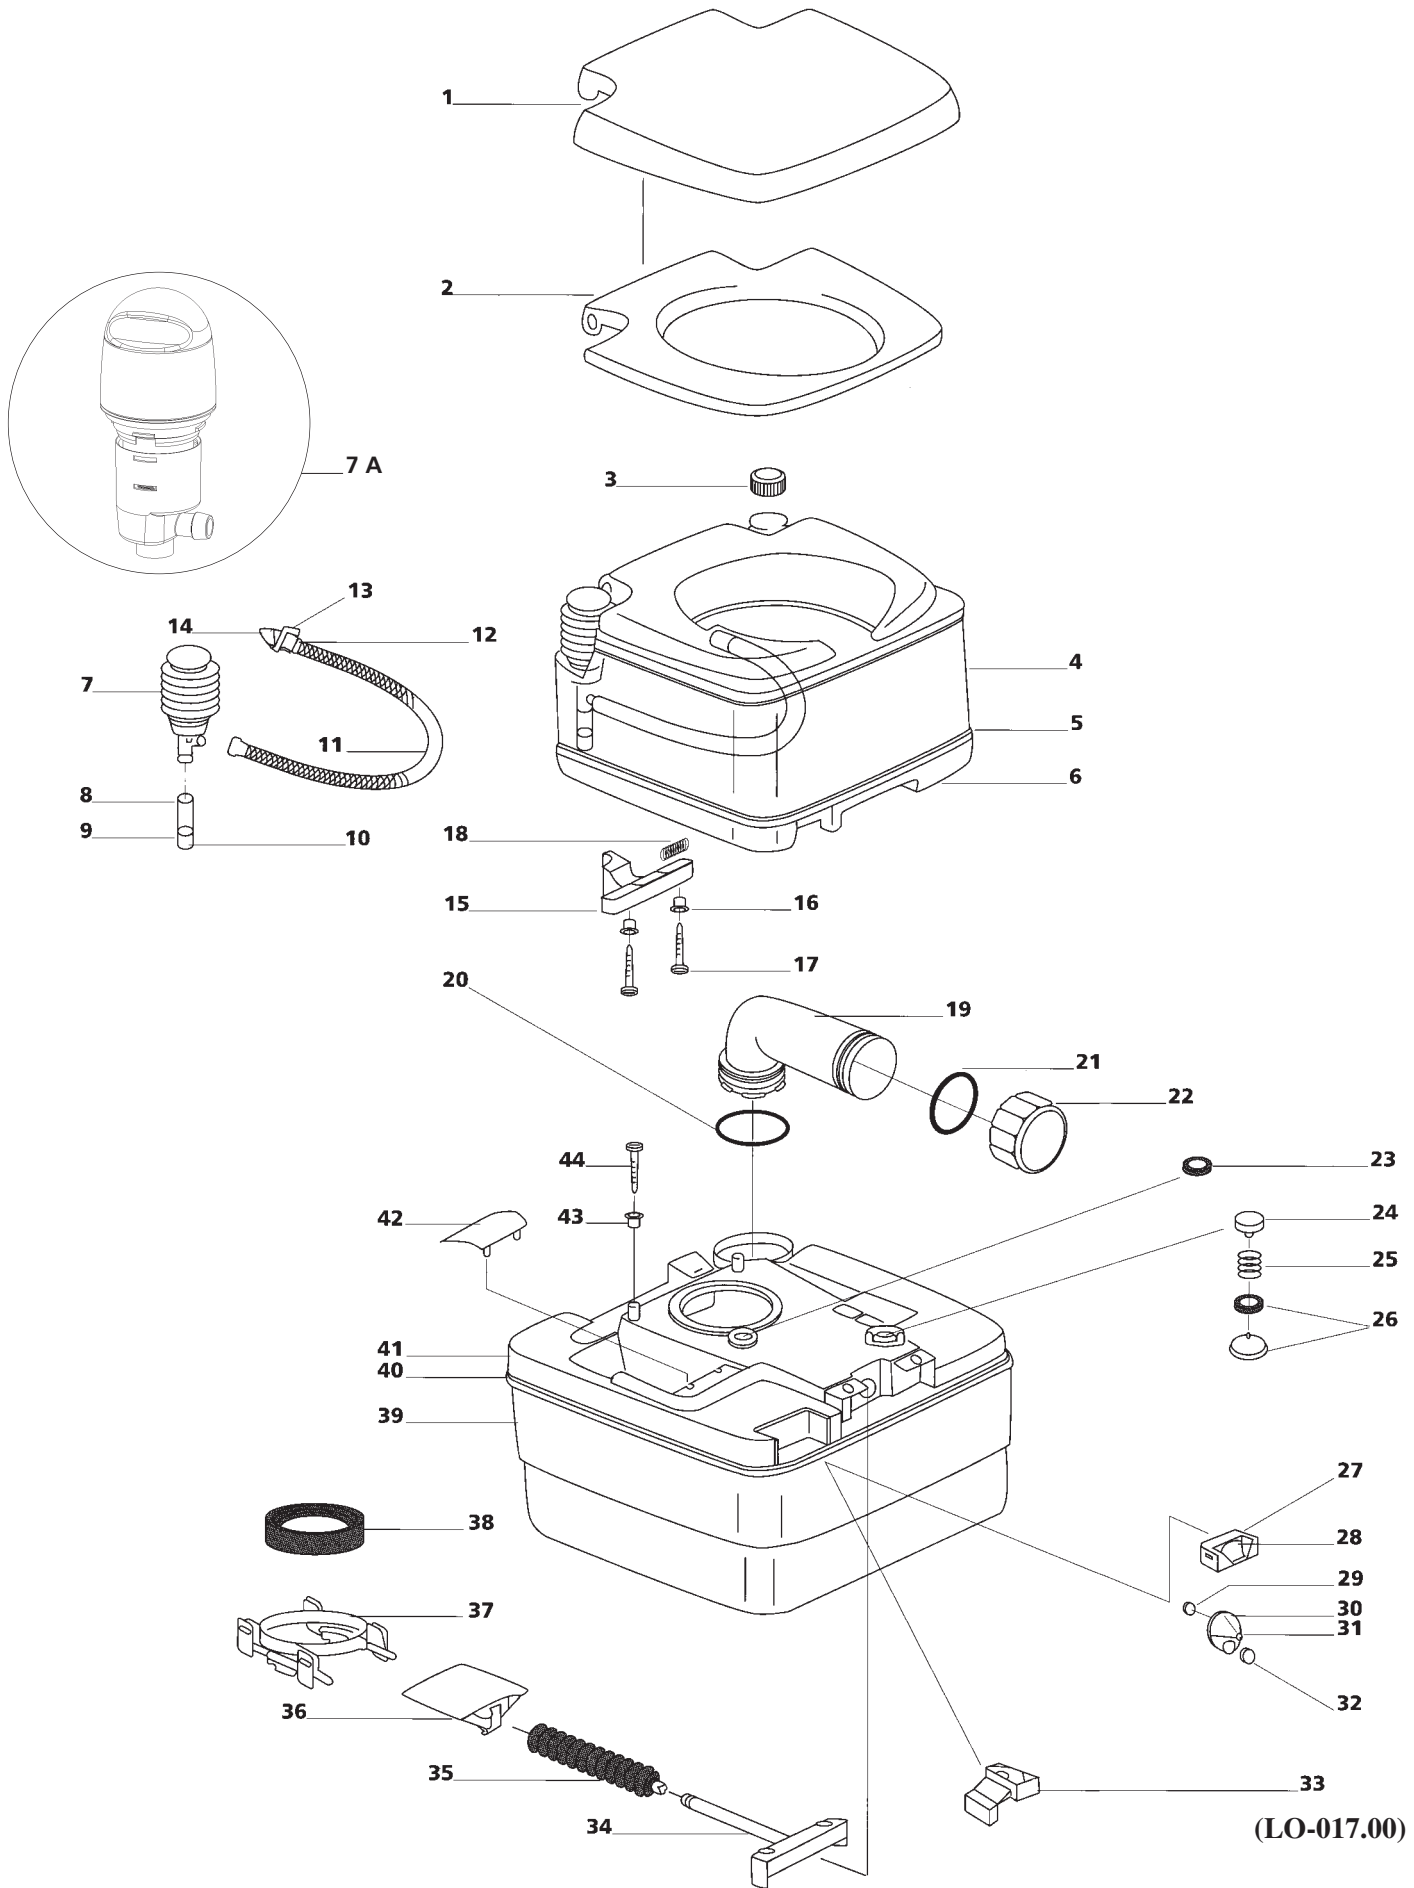

(LO-017.00)

## Porta Potti 335/345/365 (LO-047.00)


Spare part	Single spare part number	Assembly spare part number	Available in colour number
<b>1.</b> Cover		07331	68/79
<b>2.</b> Seat		(PP 335) 07220	79
<b>3.</b> Waterfill cap	12901		79
<b>4.</b> Watertank upper			
<b>5.</b> Weld watertank			
<b>6.</b> Watertank lower			
<b>7.</b> Bellow	07862		62
<b>7a.</b> Piston pump*	25817 (PP335) 25818		79 68/79
<b>8.</b> Inlet tube		07024	
<b>9.</b> Check valve body		(PP 335) 07016	
<b>10.</b> Check valve flapper			
<b>11.</b> Flush tube			
<b>12.</b> Spring-seal-plunger		07031	62/79
<b>13.</b> O-ring			
<b>14.</b> Nozzle			
<b>15.</b> Clasp handle			
<b>16.</b> Clasp spacer			
<b>17.</b> Screw			
<b>18.</b> Spring			
<b>19.</b> Pour out Spout		07492	69/88
<b>20.</b> O-ring (+ <b>21.</b> )	16195		
<b>21.</b> Capseal			
<b>22.</b> Dump cap (+ <b>21.</b> )	25803		79
<b>23.</b> Ventseal	07102		
<b>24.</b> Vent button			
<b>25.</b> Spring		07524	62/79
<b>26.</b> Seal retainer			
<b>27.</b> Bezel			
<b>28.</b> Lens			
<b>29.</b> Weight			
<b>30.</b> Decal level indicator			
<b>31.</b> Dial			
<b>32.</b> Magnet			
<b>33.</b> Float arm	21322		
<b>34.</b> Valve handle			
<b>35.</b> Boot seal			
<b>36.</b> Blade			
<b>37.</b> Retainer			
<b>38.</b> Lipseal	07101		
<b>39.</b> Holdingtank lower			
<b>40.</b> Weld holdingtank			
<b>41.</b> Holdingtank upper			
<b>42.</b> Clip retainer			
<b>43.</b> Clasp spacer			
<b>44.</b> Screw			
Porta Potti 335	Watertank complete	07212 (excl. Seat and Cover)	79
	Holdingtank complete	25800	79
Porta Potti 345	Watertank complete	07471 (excl. Seat and Cover)	79
	Holdingtank complete	25801	79
Porta Potti 345	Watertank complete	07471 (excl. Seat and Cover)	68
	Holdingtank complete	25801	68
Porta Potti 365	Watertank complete	07471 (excl. Seat and Cover)	79
	Holdingtank complete	25802	79
Porta Potti 365	Watertank complete	07471 (excl. Seat and Cover)	68
	Holdingtank complete	25802	68

\* Toilets produced after August 2005.

For colournumber see page 68

Porta Potti

# Porta Potti 465

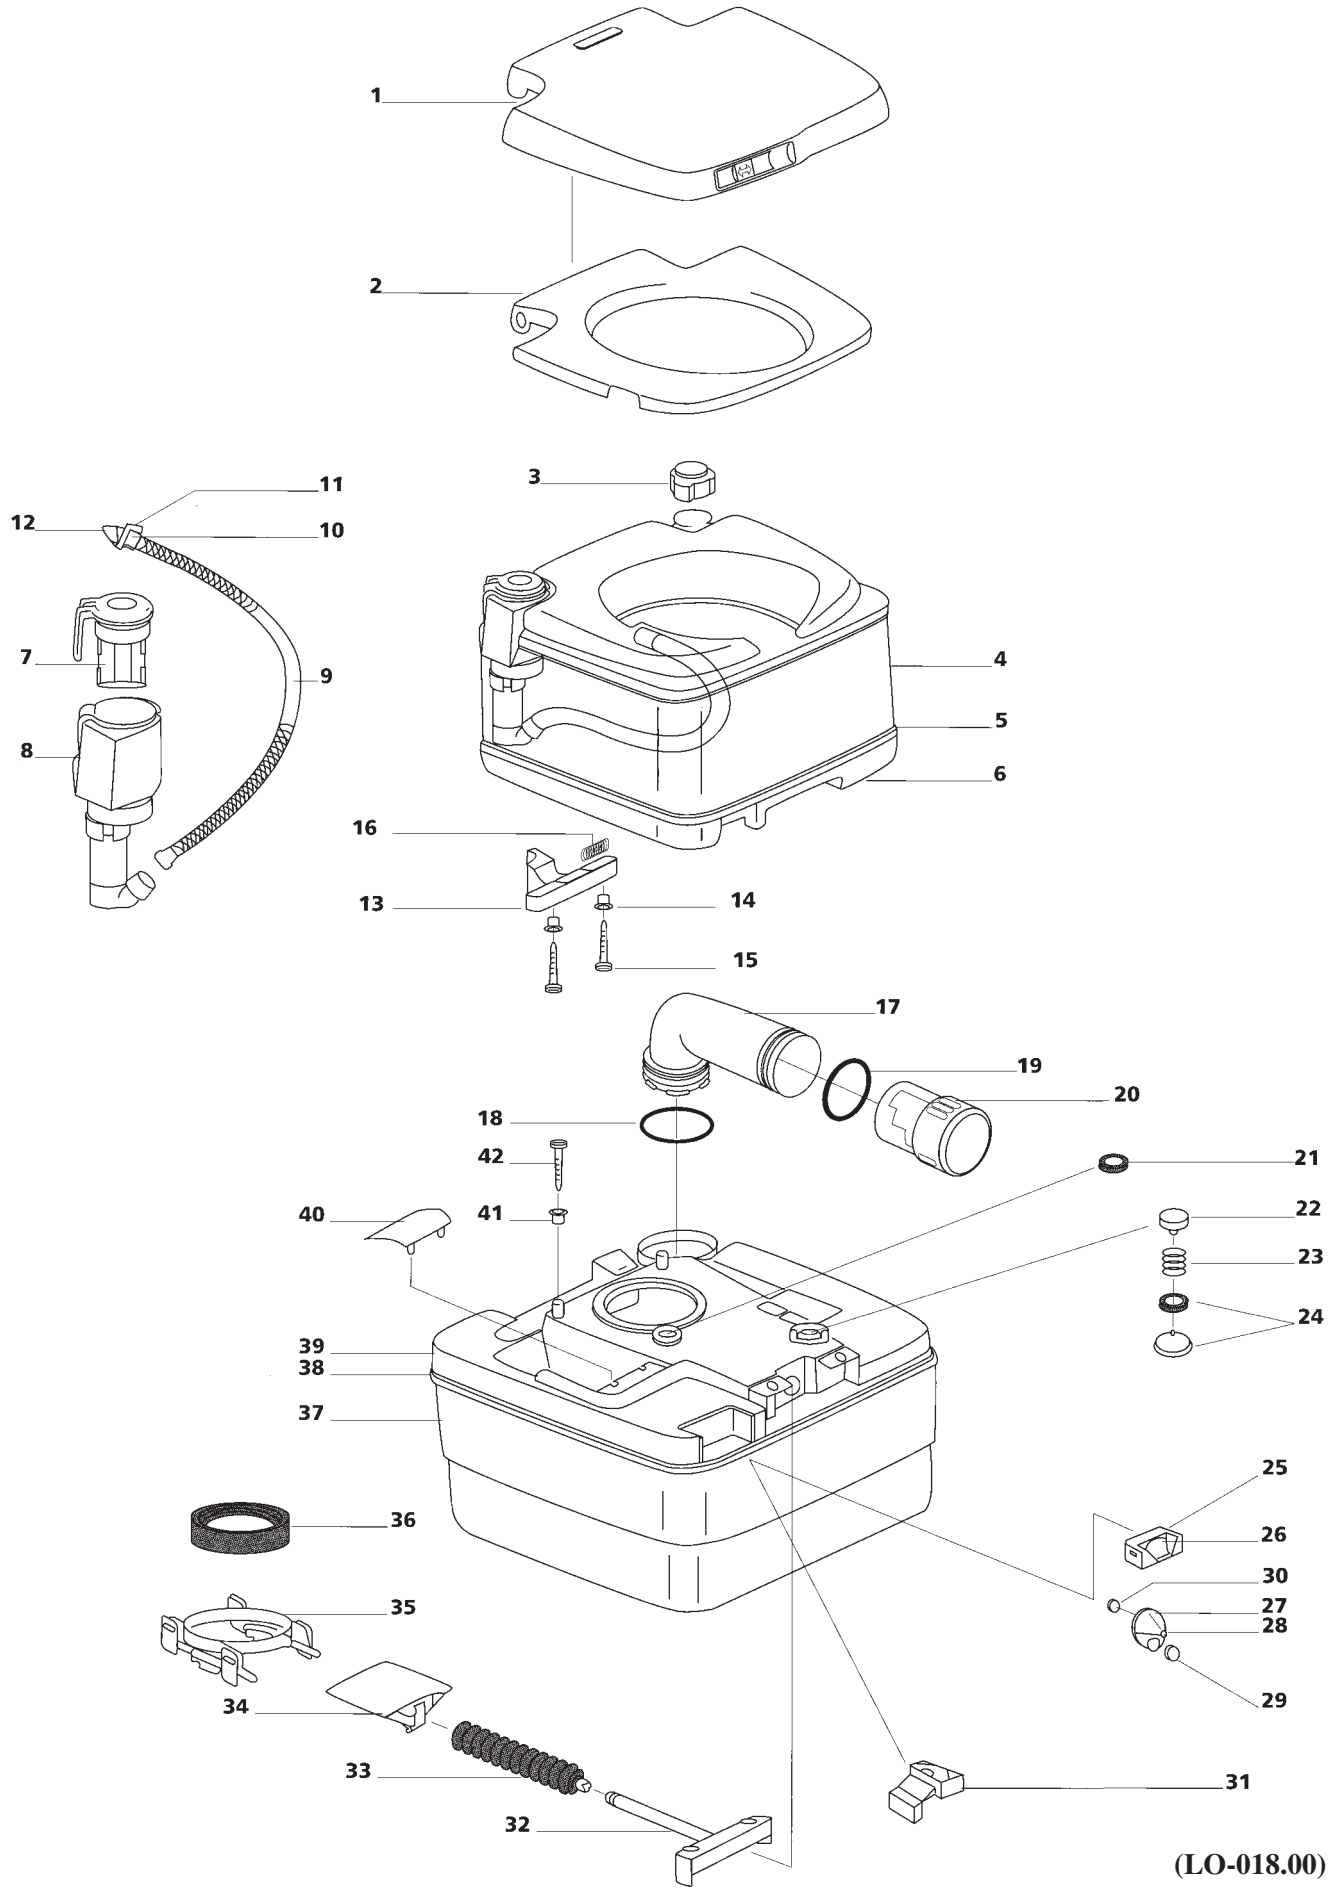

(LO-018.00)

**Porta Potti 465 (LO-048.00)**

Spare part	Single spare part number	Assembly spare part number	Available in colour number
1. Cover		07317	79/89
2. Seat			
3. Waterfill cap	25804		79/89
4. Watertank upper			
5. Weld watertank			
6. Watertank lower			
7. Button housing	25806		79/89
8. Pump housing	25807		79/89
9. Flush tube			
10. Plunger/pin/ball/retainer magnet/spring/striker pin seal check valve		25808	79/89
11. O-ring			
12. Nozzle			
13. Clasp handle			
14. Clasp spacer			
15. Screw			
16. Spring			
17. Pour out Spout		25809	88/90
18. O-ring (+19.)	16195		
19. Capseal			
20. Measuring cup (+19.)	25810		79/89
21. Ventseal	07102		
22. Vent button		07524	79/89
23. Spring			
24. Seal retainer			
25. Bezel			
26. Lens			
27. Decal level indicator			
28. Dial			
29. Magnet			
30. Weight			
31. Float arm	21322		
32. Valve handle			
33. Boot seal			
34. Blade			
35. Retainer			
36. Lipseal	07101		
37. Holdingtank lower			
38. Weld holdingtank			
39. Holdingtank upper			
40. Clip retainer			
41. Clasp spacer			
42. Screw			
Porta Potti 465	Watertank complete	25805 (excl. Seat and Cover)	79
	Holdingtank complete	25811	79
Porta Potti 465	Watertank complete	25805 (excl. Seat and Cover)	89
	Holdingtank complete	25811	89