

25817-79 / 25818-68/79 Piston pump

A. Change over from bellow to piston pump





Disassemble water tank from waste tank and, take seat & cover off.



Cut half off the bellow with the knife and, take the bellow out.



Note : Turn the water tank around when holding the bellow with the pincers. Take the bellow off the flush tube.

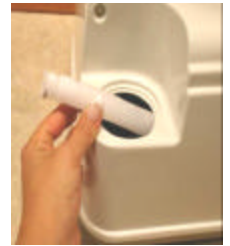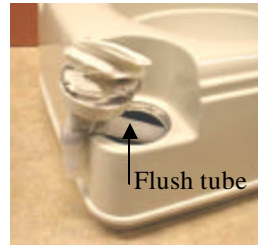

Note : before placing the Piston Pump, please remove the grey sealant which was used for the bellow.



Take the piston pump and connect it to the flush tube.



Place the piston pump on its place and press it back into the water tank

