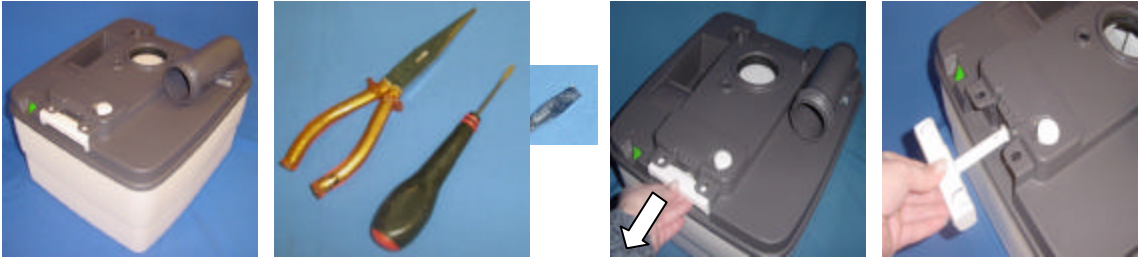

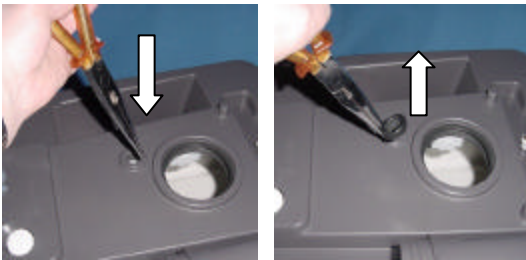

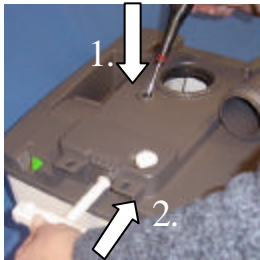


1. 07102 Ventseal / 07069 Ventseal

A. 

B. Push the ventseal down, out of the inside groove.  Pull the ventseal out through the hole. 

C.  Hold the ventseal in position with the flat screwdriver (1), while closing the blade slowly (2). 

 
2. 07101 Lipseal / 07143 Lipseal

A. 

B. Pull the lipseal out of the inside groove. 

C. Push the lipseal into the inside groove, and close the blade.  **Note:** Top has to be pushed in first.   

3. 07524 Vent button / 29314-62 Vent button



- 1. Seal retainer
- 2. Spring
- 3. Vent button



B. Go with your hand in the waste tank and press the vent button (3).



While pressing the vent button, pull the seal retainer loose (1).



C. Bring new seal retainer (1) and spring (2) in position and click the vent button (3) into the seal retainer

